

SELF CHECK-IN KIOSK

Drop off. Skip the queue.

A portrait touchscreen kiosk that lets dry cleaning and laundry customers check themselves in, choose their services, pick a collection time and pay by card. Every order lands in your Spotless till instantly.


Takes about a minute

Card payments

Bag labels & tickets


Special offers applied automatically

Orders straight into the POS

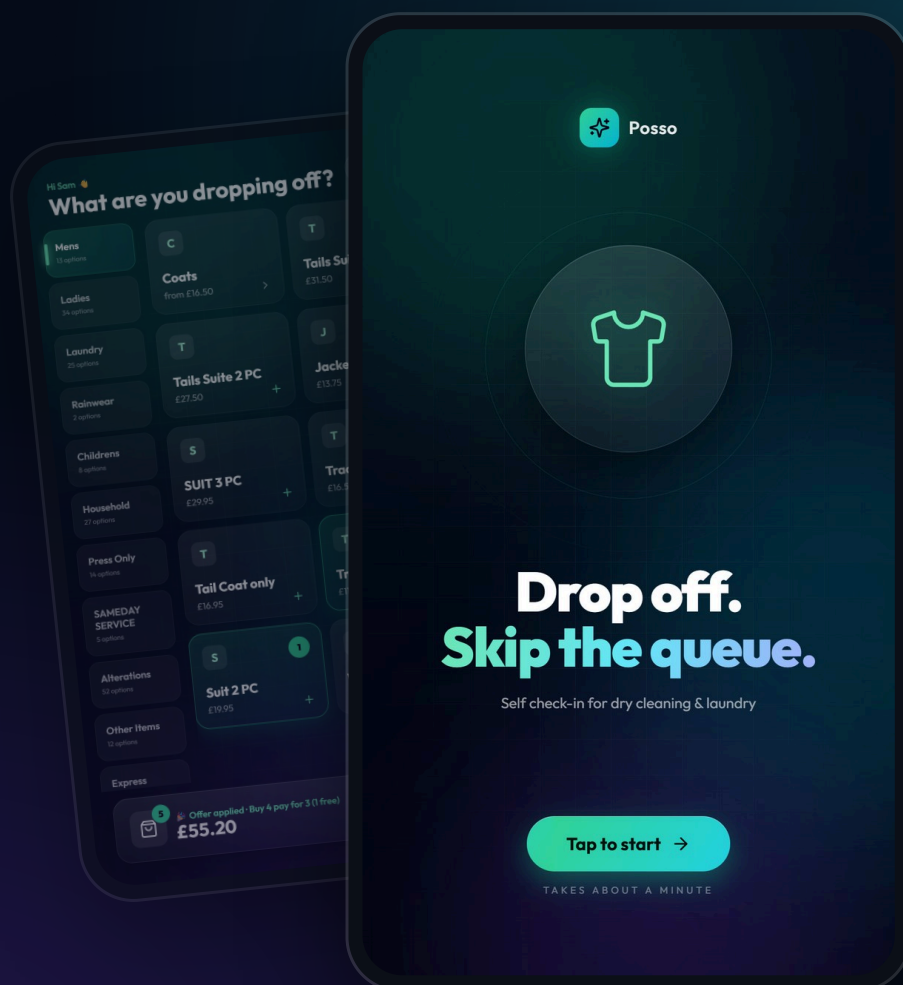


Customers sign in with their mobile number

Returning customers are recognised instantly. New customers type their name once on the built-in keyboard and their account is created for them.

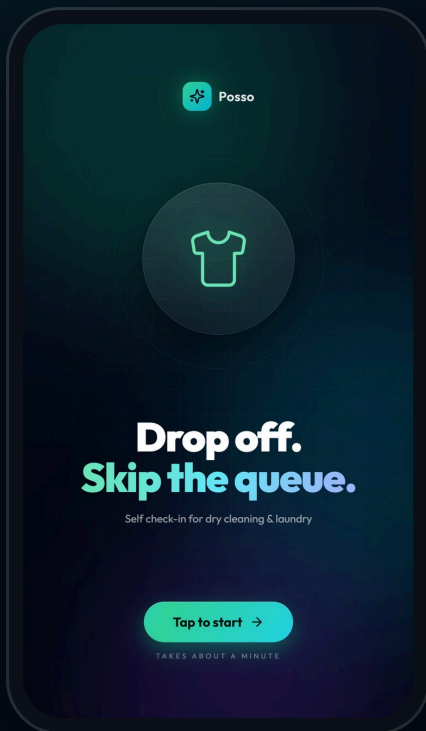


1 Tap to start

An eye-catching attract screen invites customers to begin.

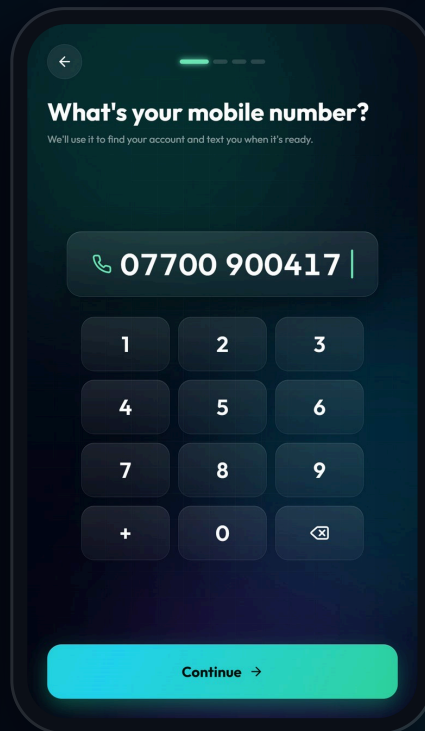

2 Enter mobile

Large keypad finds their account in a second.



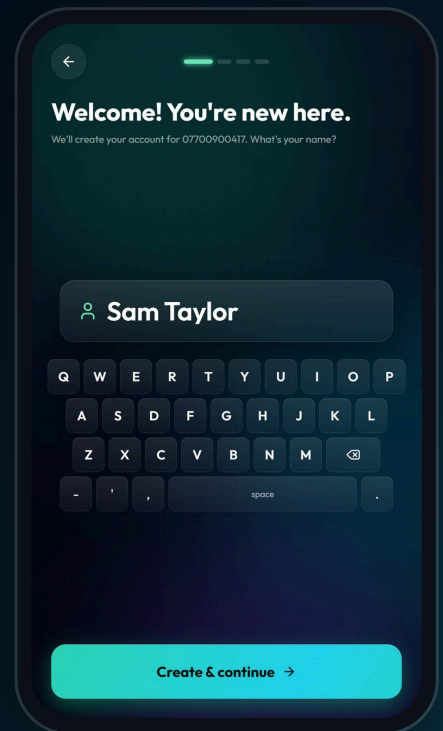


3 New? Add a name

On-screen keyboard, no physical keyboard needed.

Your full price list, beautifully laid out

Services come straight from your Spotless catalogue: same items, same prices. Offers like "Buy 4, pay for 3" are applied as soon as they qualify.

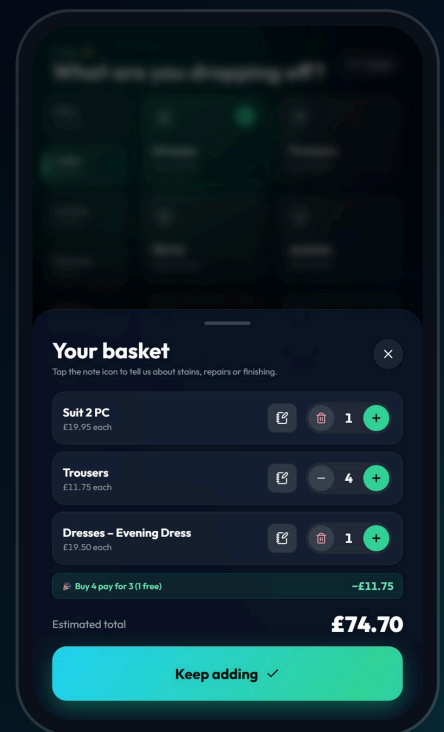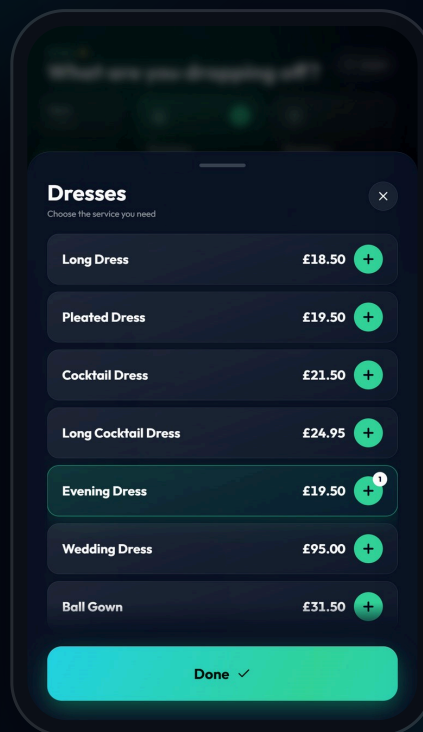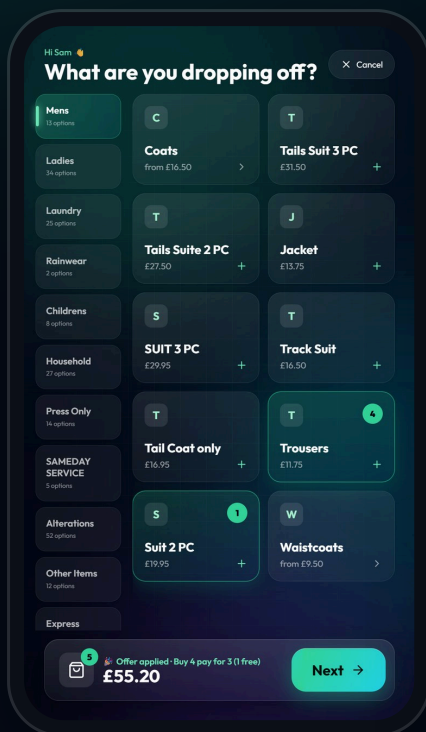

4 Browse by category

Mens, Ladies, Laundry, Household and more, with live basket total.

5 Pick the exact service

Multiple options per garment, each with its price.

6 Review the basket

Change quantities, remove items, see the offer saving.

Notes, dates and collection times

Customers flag stains and repairs on each garment, choose Standard or Express, and pick the day and time they'll collect.

Note for Dresses – Evening Dress

Tap a quick note or type your own.

☒ Stain
 ☐ Missing button
 ☐ Starch
 ☐ No starch
 ☐ Hang
 ☐ Fold
 ☒ Delicate
 ☐ Repair needed

Stain, Delicate

Save note ✓

7 Garment notes

One-tap notes like Stain, Delicate or Repair needed, or type your own.

When do you need it?

Pick a collection day and time. Choose Express if you're in a hurry.

☒ Standard
 ☐ Express

Ready from Thursday 22 Oct

Ready as soon as next working day. Express charges may apply.

COLLECTION DATE

TUE 20 Oct	WED 21 Oct	THU 22 Oct	FRI 23 Oct
SAT 24 Oct	MON 26 Oct	TUE 27 Oct	WED 28 Oct
THU 29 Oct	FRI 30 Oct	SAT 31 Oct	MON 2 Nov

COLLECTION TIME

☐ Morning
☒ Afternoon
☐ Evening

Order notes (optional)
Anything we should know? Tap to add.

Review order →

8 Date required

Standard or Express, closed days skipped, morning / afternoon / evening.

Notes for this order

Tap a quick note or type your own.

☒ Please call when ready
 ☐ Collecting for someone else

☐ Allergic to perfumes
 ☐ Eco wash please
 ☐ Box shirts

Please call when ready


Save note ✓

9 Order notes

Anything else staff should know, e.g. "Please call when ready".


Pay by card, get a ticket, drop the bag

A clear summary, then the customer taps their card on the connected card machine. The kiosk prints a ticket and bag label, and the order appears in your till.

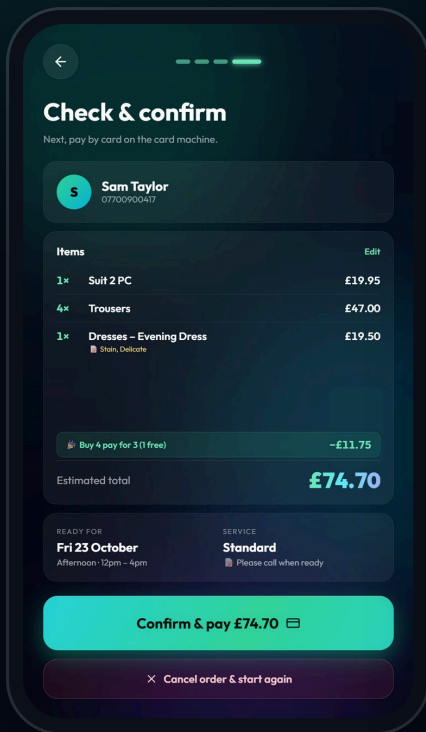


10 Check & confirm

Items, notes, offer savings and collection time on one screen, or cancel and start again.

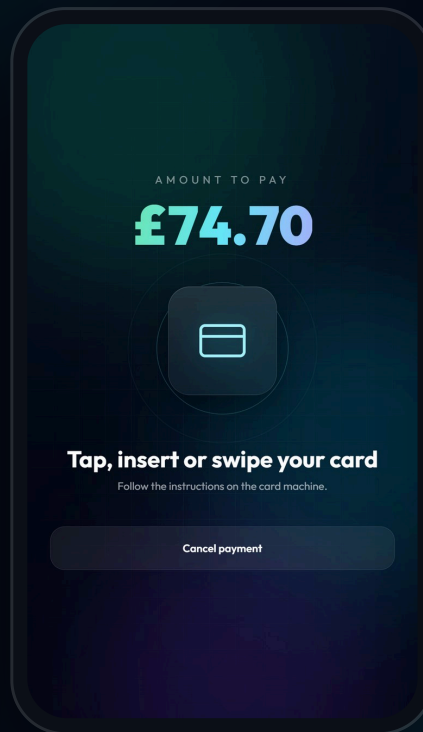

11 Card payment

Contactless, chip or swipe on the card machine. Pay-on-collection can be allowed too.

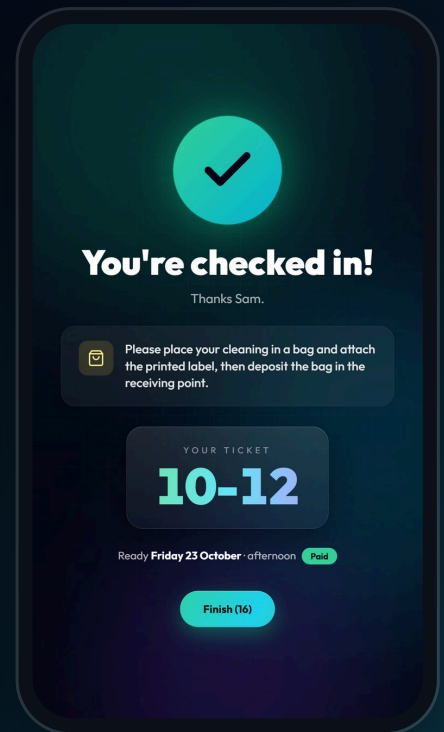

12 Checked in

Ticket number, drop-off instructions and collection day. Resets itself for the next customer.

Everything managed from Spotless

Orders straight into the POS

Kiosk orders arrive in Order Tracking as new orders with notes, due date and payment status, numbered per shop each month.

Card payments

Connects to your card machine with a one-time QR pairing. Every payment attempt is logged for easy reconciliation.

Tickets & bag labels

Prints on the kiosk's own printers, separate from the till. Edit the ticket and label designs in Settings with a live preview.

Special offers


Buy-X-pay-Y and bundle deals set up in Spotless are applied automatically and charged correctly.

Your words, your rules

Edit the drop-off instructions, choose whether customers can pay on collection, and set how many labels to print.

Safe & self-resetting

Returns to the start after a minute of inactivity with a friendly "Still there?" countdown. Staff exit is hidden behind a hold-and-code.

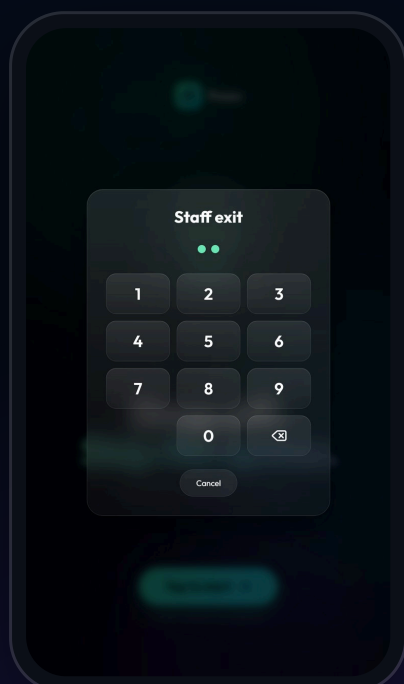

Screen

Portrait touchscreen, 1080 × 1920

Runs on

Spotless desktop app on Windows (needed for silent printing)

Payments

Teya card terminal (contactless, chip & PIN)

Printing

Thermal receipt printers and label printers

Staff exit

Hold the corner for 10 seconds, then enter a code